


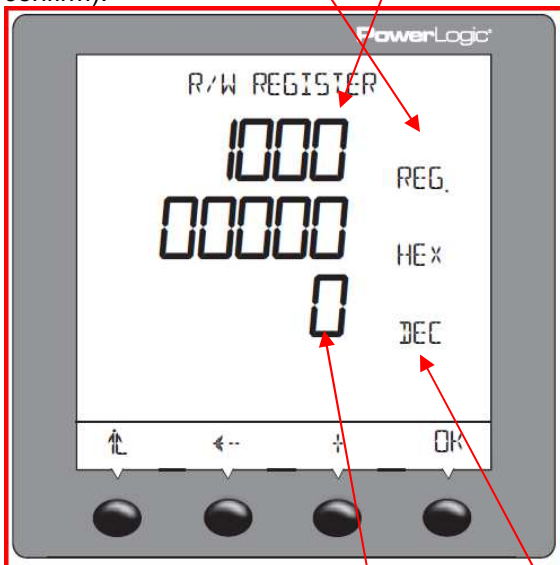
ENABLE FLOATING POINT REGISTERS USING DEVICE DISPLAY

Read the PM8xx User Manual.
Please do this steps:

1. On PM810 display go in Menu MAINT>DIAG than push REG.



2. Push  and insert password(0000) and push OK.
3. On display select REG no 08000. This is the register where write the setup command.(Read in document 63230-500-200.pdf, chapter 6-Operation to see how to insert numbers and how to confirm).



4. Push OK, and this make cursor to go to DEC row.
5. In DEC row select the number 09020. This is the CLI comand code which allows to enter in setup mode and write registers.
6. Push OK.
7. In REG row select register 03248. Push OK.
8. IN DEC row select 00001. Push OK.
9. In REG row select register no 08001. Push OK.
10. In DEC row select 00001. Push OK.
11. In REG row select register no 08000. Push OK.
12. In DEC row select 09021. Push OK. This is save settings and close the setup mode.

Now if in REG row select a float register address like for instance 11726 he can read first register from float value of phase A voltage. Using ETG 100 he can read more.